

LOCKBOX FIRMWARE UPDATE INSTRUCTIONS

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE YOU BEGIN!


Your SentiCard account has been flagged to receive an upgraded version of the lockbox software the next time you renew your card.

To perform the firmware upgrade, please complete the following six easy steps:


1. Renew your SentiCard

NOTE: The renewal time takes 2 to 3 minutes when the upgrade program is downloaded onto your SentiCard, so you'll probably notice a longer renewal time when this occurs.

2. Prepare the lockbox for the upgrade

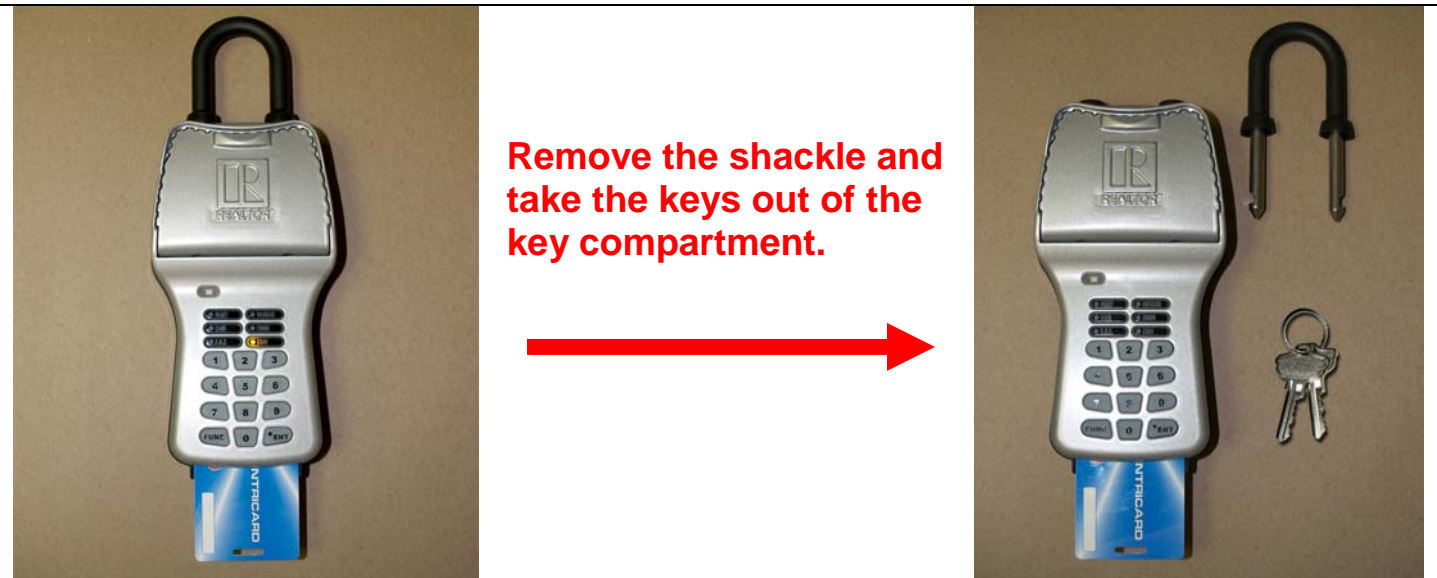

3. Insert your SentiCard into the lockbox.

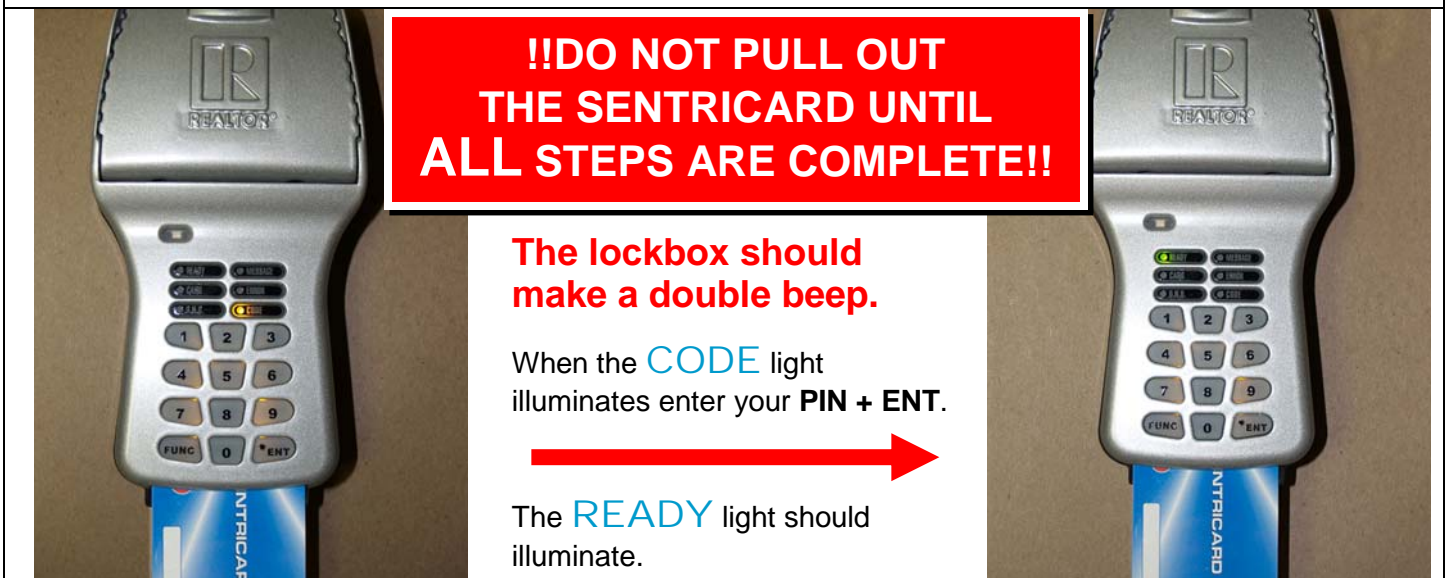

4. Upgrade the lockbox firmware

**!!DO NOT PULL OUT
THE SENTRICARD UNTIL
ALL STEPS ARE COMPLETE!!**



Press

FUNC + FUNC + 37265 + FUNC + ENT

!!!DO NOT REMOVE THE SENTRICARD!!!

Right after this sequence, the **CARD** light will blink while the lockbox firmware is upgrading.

!!!DO NOT REMOVE THE SENTRICARD!!!

NOTE: The upgrade process takes about 30 seconds to complete.

5. Finalize the lockbox upgrade



When the firmware upgrade is done, the lockbox will beep **followed by each status light illuminating in sequence starting with the READY light and ending with the CODE light.**

**You may remove the Sentricard ONLY AFTER
all the status lights have illuminated
and turned off again.**

Remember, **DO NOT REMOVE THE SENTRICARD** until it's been at least 5 seconds since you have seen any lights blinking.

6. Remove your card / Re-assign your lockbox to the listing

If it has been more than 5 seconds since you've seen any lights blinking, REMOVE YOUR CARD.

If the lockbox was already on a listing prior to the upgrade, re-insert your card and login to your lockbox by entering your **PIN + ENT**.

To put the lockbox back on the listing, complete the FUNC 1, FUNC 2, FUNC 3 sequence that you normally perform when putting a lockbox on a property.

OPTIONAL: If you would like to verify that the firmware was successfully upgraded, remove your Sentricard and reinsert it into the lockbox. When the **CODE** light illuminates, enter your **PIN + ENT**.

When the **READY** light illuminates, press **FUNC + FUNC + 43752 + FUNC + ENT**.
A **series of 3 beeps** indicates the lockbox was successfully upgraded.